



## JLT 3.0 Oil Separator, Driver Side (2007-2014 GT500) #3012D

### Installation Instructions

Please review complete instructions prior to installing.

1	Remove the stock line from the valve cover to intake tube. To remove hose, slide grey tab and pull.
2	<p><b>2007-2010:</b> Remove bolt in head holding power steering bracket, slide JLT bracket between the engine and bracket and reinstall bolt.</p>  <p><b>2011-2014:</b> Use supplied M8 bolt to secure bracket to the front of the engine.</p>
3	<p>Use the supplied M4 screws to attach the Separator to the JLT bracket and connect the hoses.</p> 

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail [info@JLTtruecoldair.com](mailto:info@JLTtruecoldair.com) or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

**JLT Performance Lifetime Satisfaction Guarantee.** We want you to be a JLT Performance customer for life! Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. [www.jlttruecoldair.com/warranty](http://www.jlttruecoldair.com/warranty). We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Please visit [www.JLTtruecoldair.com](http://www.JLTtruecoldair.com) for complete return policy.

**Disclaimer:** JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.