



JLT Oil Separator, Driver Side (2015-2018 SRT8 6.2L Hemi HELLCAT) #3060D

Installation Instructions

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator w/fittings, (1) mounting bracket, (2) M4 screws, (2) 1/2" hose kits
2	Gather all of the following tools needed for the installation: 10mm socket, 6inch extension and ratchet, Phillips screwdriver
3	<p>Remove the factory PCV hose from PCV valve to intake tube- On the connector, depress the button on the connector and pull the entire fitting off.</p> 
4	<p>Remove pre-existing nut next to coolant tank. Install JLT Bracket over stud and reinstall nut.</p> 
5	Use the supplied screws and mount the Separator to the JLT bracket.
6	Route hoses to their proper PCV connections. The JLT bracket may need to be adjusted to make the can sit level.

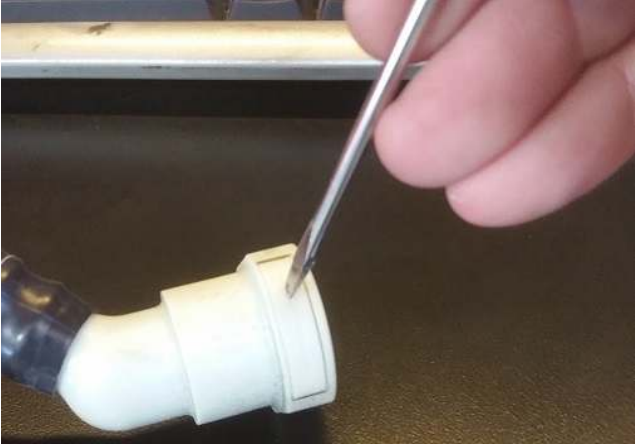

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail info@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

JLT Performance Lifetime Satisfaction Guarantee. We want you to be a JLT Performance customer for life! Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.jlttruecoldair.com/warranty
We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.
Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.
Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.