



JLT 3.0 Oil Separator (2005-2021 5.7 Hemi, Passenger Side)

#3061P

Installation Instructions.

Full install video available on our website, search 3061P and select the video tab.

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator w/fittings, (1) mounting bracket, (2) fine thread machine screws, (1) mounting bolt, (2) ½" Couplers, (2) ½" – 5/8" couplers
2	Gather all of the following tools needed for the installation: 13mm socket and ratchet, Phillips screwdriver, pliers, light oil and Q-Tip.
3	Remove engine cover by pulling up on it. Remove the factory hard plastic section PCV hose from PCV box to intake manifold. You may need to twist the rubber section of the hose with pliers to break the bond of the plastic and rubber for removal. 
4	Rotate 90 degree rubber coupler towards front of engine. 

Locate mounting location for bracket. Depending on year of your vehicle, this hole maybe empty or have a plastic pin in it. If there is a pin in it, remove pin by wiggling it outward. Mount bracket with mounting bolt here.



5

2005-2020 owners – Lubricate the end of the JLT hoses with light oil on a Q-Tip. You will use the Supplied JLT ½” straight couplers.

2021+ Owners- Lubricate the end of the JLT hoses with light oil on a Q-Tip. You will use the Supplied JLT ½” to 5/8” reducing couplers.



6

Mount oil Separator to mounting bracket, connect long hose to connection at the back of the engine. Connect short hose to the 90 degree elbow. Tighten mounting bolt. Reinstall engine cover.

7



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail Info@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

JLT Performance Lifetime Satisfaction Guarantee. We want you to be a JLT Performance customer for life! Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.jlttruecoldair.com/warranty

We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.