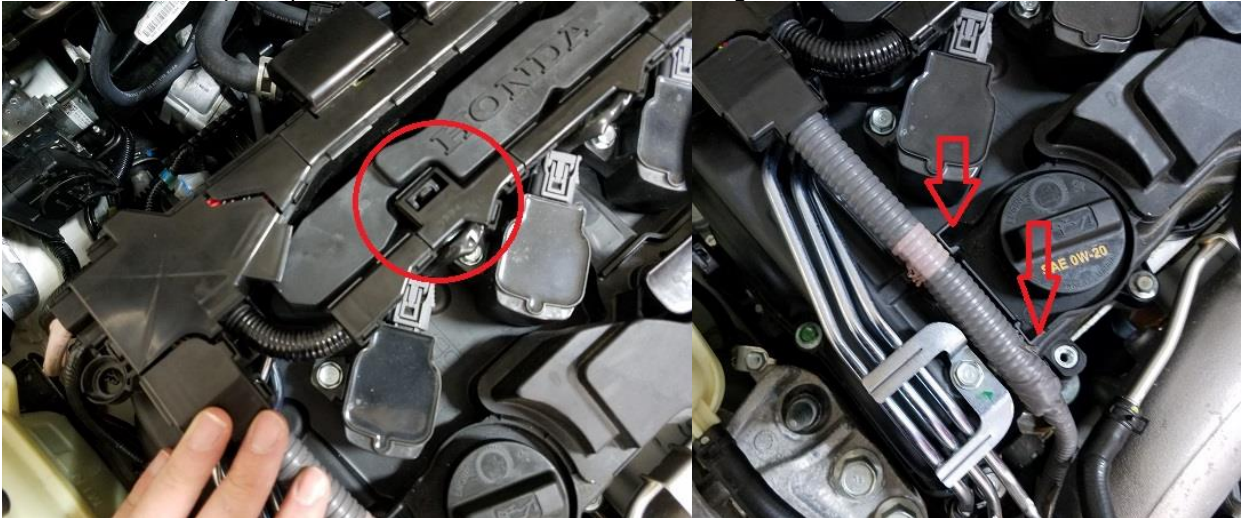
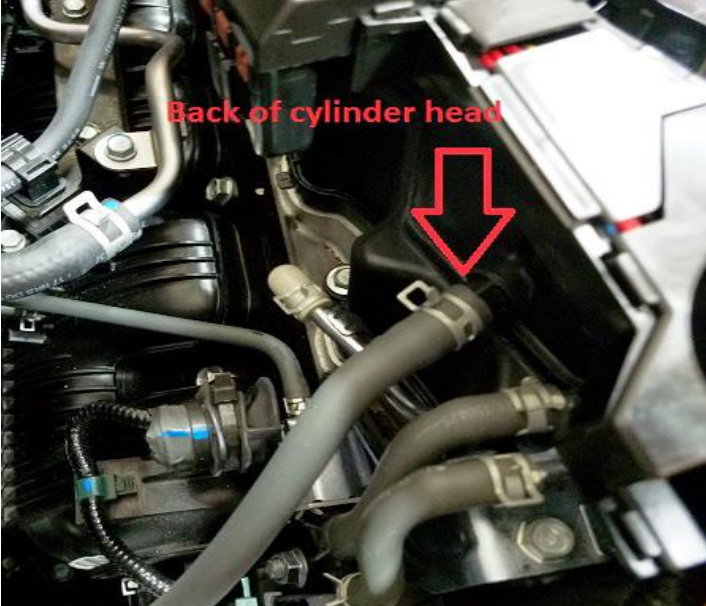


JLT 3.0 Oil Separator Passenger Side (2017-19 Honda Civic Type R) #3100P

Installation Instructions

To view install video: go to our website, www.JLTtruecoldair.com and type 3100P in search box. Click on product, scroll down and click on videos.

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) mounting bracket, (2) fine thread screws, (1) #4 hose clamp and (1) M6 bolt
2	Gather all of the following tools needed for the installation: Phillips screwdriver, Flat head screwdriver, light oil, 10mm socket, 1/4" Ratchet and extension, and pliers
3	<p>Remove the engine cover by removing (5) 10mm Bolts and pulling up on the cover. Unclip wiring harness from small tab and pull up harness from front of the cover to get some slack in the harness.</p> 
4	<p>Locate PCV line running from valve cover to the intake manifold. Squeeze spring clamp and slide down the hose. To remove the hose, you may need to grab it with your pliers at the barbed fitting and twist to break the seal. Use care in doing this!!</p> 
5	Assemble the JLT Oil Separator with the bracket and line up the logos so they match. Pre-install the hose clamp on the short hose for easier access.

Remove 10mm bolt holding coolant reservoir, install oil separator bracket and JLT supplied bolt. Be sure the bracket is not touching the A/C line right next to it.



6

Install short hose onto the valve cover fitting and tighten the hose clamp with a screwdriver. Take OEM PCV line and put oil inside of hose end to help with sliding onto the can fitting. Once line is installed onto fitting, use pliers to re-install spring clamp. Re-install harness into proper location and re-install engine cover.

7



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business.

If you have any questions, please e-mail Info@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

JLT Performance Lifetime Satisfaction Guarantee. We want you to be a JLT Performance customer for life! Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here.

www.jlttruecoldair.com/warranty. We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.